How to set the system date & time

To set the system date & time, follow these steps:

- 1. Enter system programming by pressing TRANS/PGM * #
- 2. Press TRANS/PGM 178
- 3. For the system time:
 - 1. press Flex key 1 (might be labeled Line 1; it is the top left button in the section of 24 buttons)
 - 2. Enter the time in military time
 - 3. press SAVE
 - 4. press SPEAKER to exit OR
- 4. For the system date:
 - 1. press Flex key 2
 - 2. Enter the date in this format: MMDDYY
 - 3. press SAVE
 - 4. press SPEAKER to exit

Online URL: https://kb.naturalnetworks.com/article.php?id=1