

# How to find or change the IP Address of the system

1. Enter system programming by pressing TRANS/PGM \* #
2. Press the [TRANS/PGM] button + 108.
3. Press the FLEX 2 Button.
4. Enter the server IP Address (12 digits). (ex., 192168131154 for IP : 192.168.131.154)
5. Press SAVE

Online URL: <https://kb.naturalnetworks.com/article.php?id=42>