

How to factory reset Yealink cordless phones

Method 1: From the Base

1. Power off the unit by unplugging the power cord from the back (for PoE, disconnect the network cable).
2. Wait for 15 seconds.
3. With the unit unplugged, press **and hold** the connect button on the base station.



4. While still holding the connect button, plug the power (or network cable if PoE) back into the unit.
5. Wait until all three lights on the unit are showing as solid green, and release the connect button.
6. Wait approximately 5 minutes.
7. Reboot the unit by unplugging it from power for 15 seconds and plugging it back in.

Method 2: From a connected Handset

1. Press the **OK** button in the middle of the phone to bring up the Phone's menu.




2. Using the directional buttons, navigate to **Settings** and press **OK**.



3. Enter **System Settings** by pressing **8** on the dial-pad, or scrolling down (with directional buttons) and pressing **OK**.



4. Navigate to **Base Reset** and press **OK**.

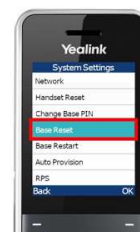

5. Enter the PIN for your device (default is "0000") and press **Done**.



6. The base will now factory reset and upon completion, will display "Success" (or similar) on the phone screen.



Online URL: <https://kb.naturalnetworks.com/article.php?id=819>