
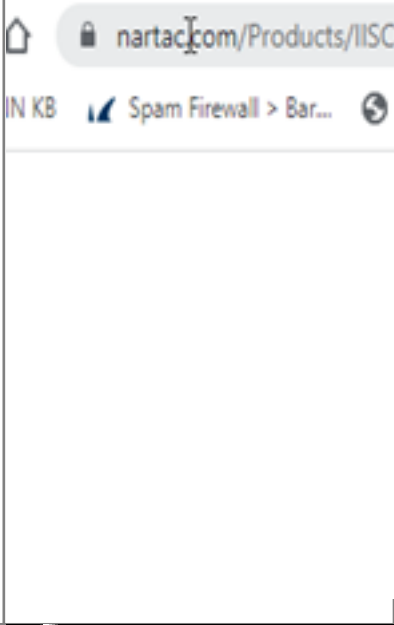


How to Easily Disable Protocols on IIS Server

Step#	Task	
1	<p>Login to the webserver as an admin and go to: https://www.nartac.com/Products/IISCrypto</p> <p>Run the tool on the webserver * – Nothing is installed</p>	
2	<p>Deselect the protocols you want to disable. This tool creates the correct registry keys** and sets them appropriately. After selecting, schedule a restart. Settings are applied after restart</p>	
3	<p>After the server restarts go to: https://www.cdn77.com/tls-test to verify settings. In addition, open the website and verify it is still working.</p>	

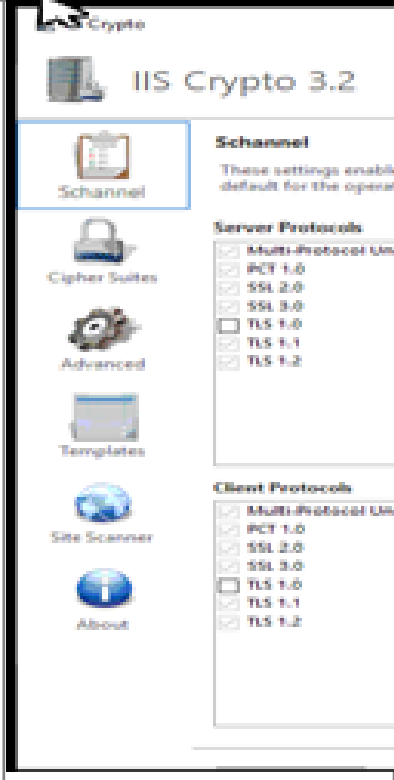

Notes:

* The tool uses settings from the following Microsoft Document to make the changes:

<https://docs.microsoft.com/en-US/troubleshoot/windows-server/windows-security/restrict-cryptographic-algorithms-protocols-schannel>

** To disable TLS 1.0 the following keys are created:

HKLM\System\CurrentControlSet\Control\SecurityProviders\SCHANNEL\Protocols\TLS 1.0\Server

DisabledByDefault = REG_DWORD Hex 1

Enabled = REG_DWORD Hex 0

Online URL: <https://kb.naturalnetworks.com/article.php?id=651>

